

Purpose

Technique PRINTSNW sets whether print output is to be generated by the snow Operations.

Valid values are NO (0), YES (1) and criteria (2).

The Global default value is criteria (2).

This Technique is Nonuniversal.

Form of Input

PRINTSNW(integer)

where integer is 0, 1 or 2 specifying:

0 = do not print

1 = print

2 = rely on criteria in the Operations to determine whether or not to print

Example

PRINTSNW(0)

Output from the snow operations will not be printed.

PRINTSNW(2)

Output from the snow operations will be printed based on Operation criteria.

PRINTSNW(1) (DRGC2)

Output from the snow operations in the Segment DRGC2 will be printed.